Hearing Loop information & Instructions

There are two hearing loops installed in the Village Hall, one in the main Hall and one in the upstairs meeting room. Only one hearing loop should be on and in use at any one time.

The main hall has a unit mounted on the wall that displays the system is on and functioning and has a remote mic on the wall.

There are also 2 x mics with stands stored in the under-seat store in the bar alcove. The mains on/off switch is located left side of stage next to electric distribution panel.



The meeting room has a mic on the ceiling and one mic with stand that is kept in the storeroom. The power on/off switch is located to next to the right-hand window.



Any user with a hearing aid should turn their hearing aid to the 'T' setting unless the hearing aid is auto sensing.